




Replaces Toro Groundsmaster 1000L

Parts

*Traction Unit
Brakes*

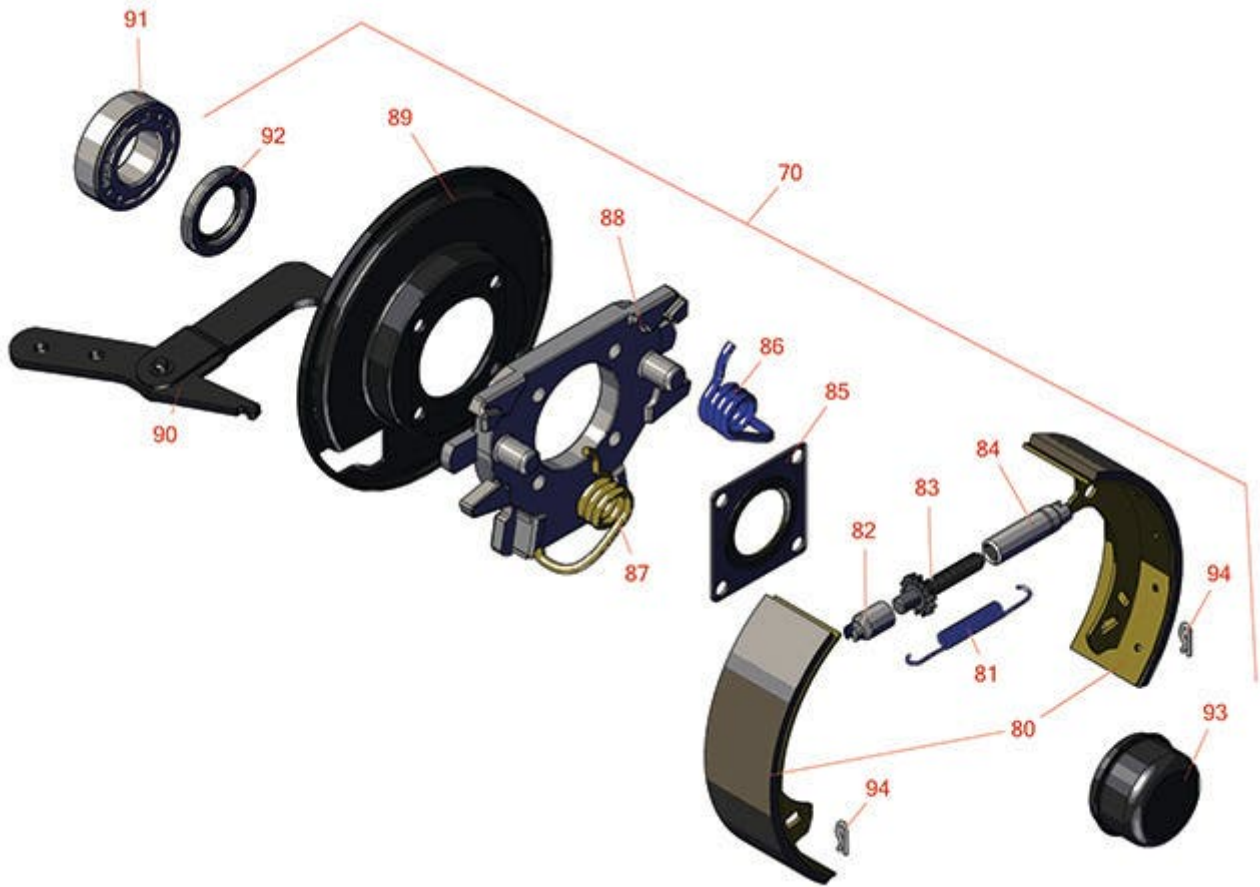

All original equipment manufacturers names and part numbers are used for identification purposes only, and we are in no way implying that our products are original equipment parts. Prices subject to change without notice.



Replaces Toro Groundsmaster 1000L

Parts

*Traction Unit
Brakes*



Item No	R&R Part No.	OEM Part No.	Description	Qty Req	Order Quantity
70	R150315		Brake Assy	2	
80	R84-8600	84-8590, 84-8600	Shoe - Brake Set/4	1	
81	R21-9440	21-9440, 40473	Spring	2	
82	R21-9390	21-9390, 40458	Socket	2	
83	R21-9370	21-9370, 40456	Screw - Adjustment	2	
84	R21-9380	21-9380, 40457	Nut - Pivot	2	
85	R28-0670	28-0670, 40450	Seal - Oil Axle	2	
86	R21-9420	21-9420, 40471	Spring - Return LH	2	
87	R21-9430	21-9430, 40472	Spring - Return RH	2	
88	R43-6810	40-2190, 43-6810	Spider - Torque	2	
89	R21-9450	21-9450	Shield - Dust	2	
90	R24-9180	21-9400, 24-9180	Lever - Parking Brake	2	
91	R21-8180	21-8180, 32-8800, 40453	Bearing - with Cup Front Axle	2	
92	R92-1774	21-8330, 92-1774	Seal - Oil Front Axle	2	

All original equipment manufacturers names and part numbers are used for identification purposes only, and we are in no way implying that our products are original equipment parts. Prices subject to change without notice.



Replaces Toro Groundsmaster 1000L

Parts

*Traction Unit
Brakes*



Item No	R&R Part No.	OEM Part No.	Description	Qty Req	Order Quantity
93	R241-119	01-269-0070, 01-269-0280, 01-286-0040, 241-119, 30-9930, 40438	Cap-Dust	2	
94	R21-9460	21-9460, 40474	Retainer	2	

All original equipment manufacturers names and part numbers are used for identification purposes only, and we are in no way implying that our products are original equipment parts. Prices subject to change without notice.