

Brush Reel - LH Keyed Shaft R101491





Details

R&R Products Brush Reels are an exciting concept in greens maintenance to clean sand and other debris left on grass surfaces after top dressing. If left on the turf, this sand and debris can cause dulling and excessive wear on mowing reels and bed knives. However, with the use of R&R Brush Reels, sand and debris are easily swept into conventional grass baskets. R&R Brush Reels are also used to stand turf up before mowing to give a cleaner, more uniform and truer putting surface. Designed with four replaceable brushes mounted in a metal frame, simply replace regular mowing reels with R&R Brush Reels and adjust bedknife to clear the brushes. The height of cut should be set to the top of the grass blades or slightly below. *Remove bedknife for the removal of pine needles. SUGGESTED USAGE: Verticutting - Dew Removal - Leaf Clean Up - Thatch Prevention Prior to Overseeding - Grooming before Mowing - Removal of Excessive Top Dressing

- Cleans Sand and other Debris off Grass Surfaces
- Stands up grass for cleaner cuts
- Equipped with four replaceable polyethylene brushes

Specifications

Manufacturer

R&R Products

Fits Models

Jacobsen E-Plex
Jacobsen E-Plex II
Jacobsen Greens King IV
Jacobsen Greens King IV Plus

TURF MACHINERY SPARES LTD

3a Monument Way West Woking, GU21 5EN

https://turfmachinery.rrproducts.com/



Brush Reel - LH Keyed Shaft R101491



Replacement Parts

R150425 Bolt - Hex HD 8-32 x

5/8

R150426 Washer - 8 SAE R150481 Brush Assy - Brush

Reel

R3296-9 Locknut - Comb

3a Monument Way West Woking, GU21 5EN

https://turfmachinery.rrproducts.com/